

## Installation Instructions

*spring clip downlight*

### Installing downlight with spring clip

1. Squeeze clips against downlight housing. (See A below)
2. Evenly insert canister up and into installation hole.
3. When canister is flush with surface, spring clip expands and canister is securely installed.

Note: 3 <sup>3</sup>/<sub>4</sub>" diameter mounting hole required

