



www.specialtylighting.com • (704) 538-6522 • fax (704) 538-0909

INSTRUCTION SHEET LIBERTY DFAL SERIES – RECESS MOUNT

CAUTION - READ THIS FIRST!



IMPORTANT SAFETY INSTRUCTIONS

- INJURY TO PERSONS AND DAMAGE TO THE FIXTURE AND/OR MOUNTING SURFACE MAY RESULT IF THE FIXTURE IS PULLED FROM THE SURFACE. TO REDUCE THE LIKELIHOOD OF SUCH INJURY OR DAMAGE, MOUNT ONLY ON A SURFACE THAT IS MECHANICALLY SOUND
- TO AVOID SHOCK HAZARD, DO NOT WORK WITH LIVE ELECTRICAL WIRES
- INSTALL FIXTURE IN DRY, INDOOR APPLICATIONS ONLY
- INSTALL AND WIRE FIXTURE IN LOCATIONS IN ACCORDANCE WITH NATIONAL, STATE, AND LOCAL CODES
- DO NOT INSTALL OUTDOORS OR IN APPLICATIONS OTHER THAN INTENDED USE

CAUTION: This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted.


MOUNTING INSTRUCTIONS

1. Determine location for fixture, then bore 2 1/2" diameter hole in 3/4" – 1 1/4" thick panel.
2. Insert fixture into bored hole.
3. Insert power cord through rectangular hole in universal mounting bracket.

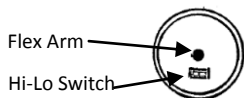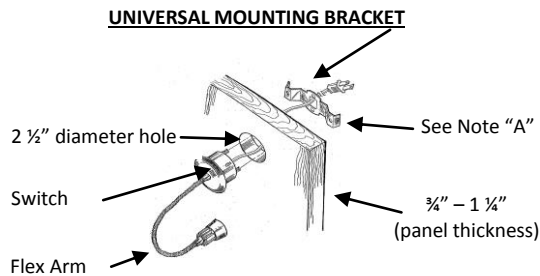


MAKE CERTAIN HI-LOW SWITCH ON FIXTURE IS POSITIONED AS DESIRED BEFORE FASTENING UNIVERSAL MOUNTING BRACKET TO PANEL.

4. Slide universal mounting bracket over PEM studs and fasten with kep nuts.



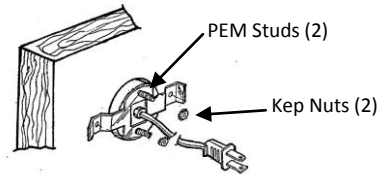


5. Attach universal mounting bracket with screws supplied or hardware suitable for the intended mounting surface.

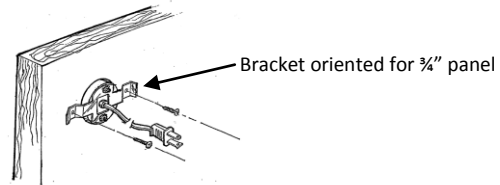

NOTE "A"

See illustrations below for correct orientation of universal mounting bracket for different panel thicknesses.

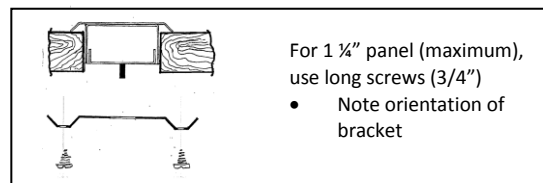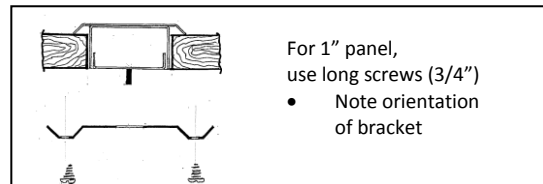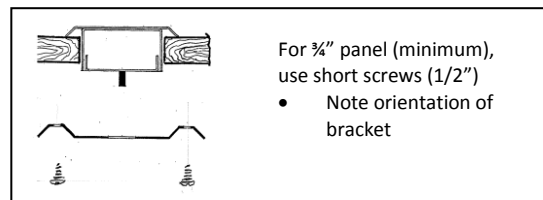

SAVE THESE INSTRUCTIONS